



INFORMATION AND COORDINATES				
POS	X	Y	Z	NOTES
A	26	52	354	
B	134	-383	0	M24x1,5
C	90	18	394	
D	237	436	313	
E	729	62	388	Ø9,5
F	932	252	298	Ø9,5
G	804	221	416	
H	113	344	265	
I	30	344	-432	Ø80
J	-169	456	321	Ø80
K	734	535	277	
L	735	577	280	
M	534	564	322	
N	-39	65	240	
O	102	458	-316	Ø102
P	458	343	-323	Ø89,16 (Ø124 V-CLAMP)
Q	-71	497	-60	Ø50
R	-45	-217	210	Ø60
S	881	305	-15	
T	-223	695	-224	FOR VOLVO PENTA EXP. TANK
U	1138	654	-208	
V	313	56	-158	
W	134	432	-17	
AA	333	-156	167	
BB	892	305	187	
CC	-39	421	178	M22x1,5
DD	-100	-37	240	M22x1,5
EE	-177	519	63	Ø10 (Ø9,5 HOSE TO BE CONNECTED TO EXP TANK)
FF	-107	-162	248	Ø28
GG	99	198	150	QUICK CONNECTOR Ø16
HH	243	263	96	Ø20
LE1	-42	581	-118	
LE2	819	560	135	
LE3	864	554	-162	
COG	419	214	4	

SCALE 1:5  
FOR TOLERANCES ON MEASURES PLEASE CONTACT VOLVO PENTA  
ENGINE WITH SAE1 FLYWHEEL HOUSING, WITH SAE3 ADAPTER

DIMENSION DRAWING  
 MDE 8 VE  
 T2/T3  
 DIMENSION DRAWING  
 Volvo manufacturing parts  
 22350957 03